

Cleaning the One Touch Cappuccino-Frother



In addition to using the cappuccino cleaning system, you should also remove the One Touch Cappuccino-Frother regularly and rinse it under running water

- Remove the One Touch Cappuccino-Frother from the IMPRESSA Z5
 - Dismantle frother
 - Rinse all parts of the frother under running water
 - Reassemble the frother and reattach to machine
-
- Please make sure that the aperture of the air supply (= red circle) is rinsed very carefully and is free of impureness. Please don't clean the frother with sharp tools!



IMPRESSA
if you love coffee


Art. 65794 – 12/05



Coffee in its most perfect form – IMPRESSA Z5
Short operating instructions

First use



- Switch on mains switch
- Press operating button 
- Fill water tank
- Fill bean container





- Turn Rotary Switch until desired language appears
- Press Rotary Switch to confirm selection




- Turn Rotary Switch to set time in hours
- Press Rotary Switch to confirm hours
- Turn Rotary Switch to set time in minutes
- Press Rotary Switch to confirm minutes



- Maintenance key  lights up
- Place one container each under the hot water dispenser and One Touch Cappuccino-Frother
- Press maintenance key 
- System fills automatically



- Place container under coffee dispenser
- Press maintenance key 
- The system is rinsed with fresh water

The machine is now ready for use

After being used for the first time, the machine must be left switched on for at least 24 hours, to ensure it is in perfect operating condition.

Insert filter (first use)



- Press Rotary Switch until **FILTER NO** appears
- Press Rotary Switch again to enter this point of the program
- Turn Rotary Switch until **FILTER YES** appears on the display
- Press Rotary Switch to confirm setting



- Remove water tank and empty




- Open cartridge holder
- Fix extension piece in position on top of CLARIS plus filter cartridge (see Welcome Pack)
- Use gentle pressure to insert filter cartridge in water tank



- Close cartridge holder (it clicks audibly into place)
- Fill water tank




- Position container (approx. 0,5 litre) under One Touch Cappuccino-Frother
 - Press maintenance key 
- Filter rinse stops automatically

The machine is ready for use

Cleaning (duration: approx. 15 minutes)




- Press maintenance key 
- Display text: **TRAY / GROUNDS EMPTY**



- Empty drip tray and coffee grounds container and reinsert
- Place one container (approx. 0,5 litre) each under the height-adjustable coffee dispenser and the One Touch Cappuccino-Frother




- Press maintenance key 
- An acoustic signal is heard
- Display text: **ADD TABLET**



- Open cover to filler funnel for pre-ground coffee powder
- Drop in original JURA cleaning tablet and close cover




- Press maintenance key 
- An acoustic signal is heard
- Empty drip tray and grounds container and reinsert in machine

The machine is ready for use

Decalcifying (duration: approx. 50 minutes)




- Press maintenance key 
- Display text: **TRAY / GROUNDS EMPTY**
- Empty drip tray and coffee grounds container and reinsert
- Display text: **SOLVENT IN TANK - PRESS BUTTON**
- Remove water tank and empty




- Completely dissolve contents of one blister (3 tablets) in 0,6 litre of water
- Pour solution into water tank
- Reinsert water tank



- Remove the One Touch Cappuccino-Frother
- Place one container (approx. 0,5 litre) each under the coffee dispenser and the connector of the One Touch Cappuccino-Frother
- Press maintenance key 
- An acoustic signal is heard
- Display text: **TRAY / GROUNDS EMPTY**
- Empty drip tray and coffee grounds container and reinsert
- Display text: **WATER TANK / FILL**
- Rinse water tank thoroughly, fill with fresh, cold tap water and reinsert




- Replace the One Touch Cappuccino-Frother
- Place one container (approx. 0,5 litre) each under the height-adjustable hot water dispenser and the One Touch Cappuccino-Frother
- Press maintenance key 
- When the system is heated through, a rinse cycle is automatically activated and an acoustic signal is heard
- Display text: **TRAY / GROUNDS EMPTY**
- Empty drip tray and grounds container and reinsert in machine

The machine is ready for use

Changing the filter

After 50 litres of water or every two months, the filter is no longer effective. A reminder to change the filter appears on the display.




- Maintenance key lights up
- Press maintenance key 
- Remove water tank and empty



- Open cartridge holder
- Fix extension piece in position on top of new CLARIS plus filter cartridge
- Use gentle pressure to insert filter cartridge in water tank
- Close cartridge holder (it clicks audibly into place)
- Fill water tank



- Position container (approx. 0,5 litre) under the One Touch Cappuccino-Frother
 - Press maintenance key 
- Filter rinse stops automatically

The machine is ready for use


Cleaning the Cappuccino system

If you make Cappuccino or milk, you should clean the Cappuccino system daily.




- Press Rotary Switch until **FILTER NO** or **FILTER YES** appears
- Turn Rotary Switch until **RINSE** appears
- Press Rotary Switch to start the maintenance menu
- Turn Rotary Switch until **CAPPUCCINO CLEANING** appears on the display



- Position container (approx. 0,5 litre) under the One Touch Cappuccino-Frother and press Rotary Switch
 - Fill second container with 2,5 dl of water
 - Add one cupful of Auto-Cappuccino Cleaner
 - Dip milk suction tube in second container
- The selection lever must not be in the «Steam» position!**
- Press maintenance key  to activate cleaning cycle



- Display text: **WATER FOR CAPPUCCINO**
- Fill second container with fresh water
 - Dip milk suction tube into this container
 - Press maintenance key 
- The Cappuccino cleaning system stops automatically

The machine is ready for use